


# MAIN UNIT DIAGRAM

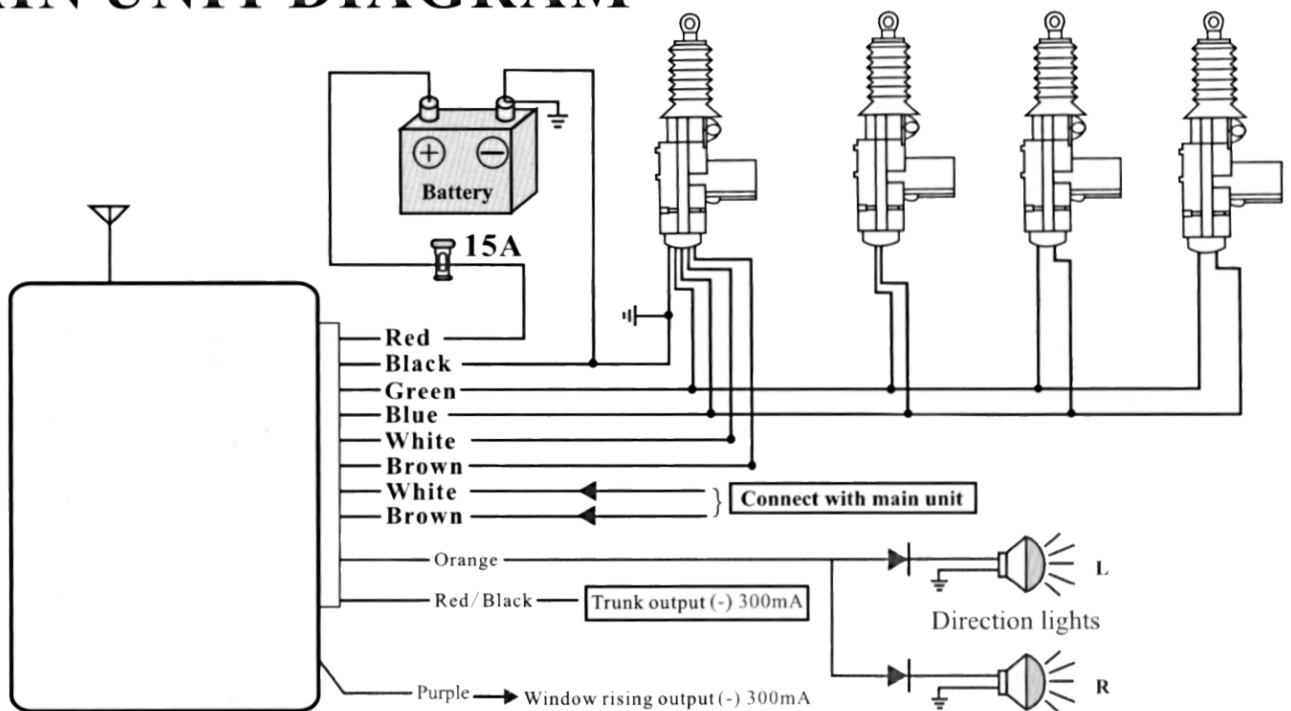

## Operation Instruction:

### 1.lock

Press "🔒" on the remote controller once with the direction light flash once, and then the central control door lock will be locked. 20 seconds negative (-) output for window roll-up.

### 2.Unlock

Press "🔓" on the remote controller once with the direction light flash twice, and then the central control door lock will be unlocked.

### 3.Trunk release

Long press 🚗/🔊 for 2.5 seconds, the direction light will flash three times and trunk release simultaneously.

### 4. Car search

Press button 🚗 once while the central door lock is locked. The lights will flash 10 times to tell the driver location of car.