


# Installation instructions

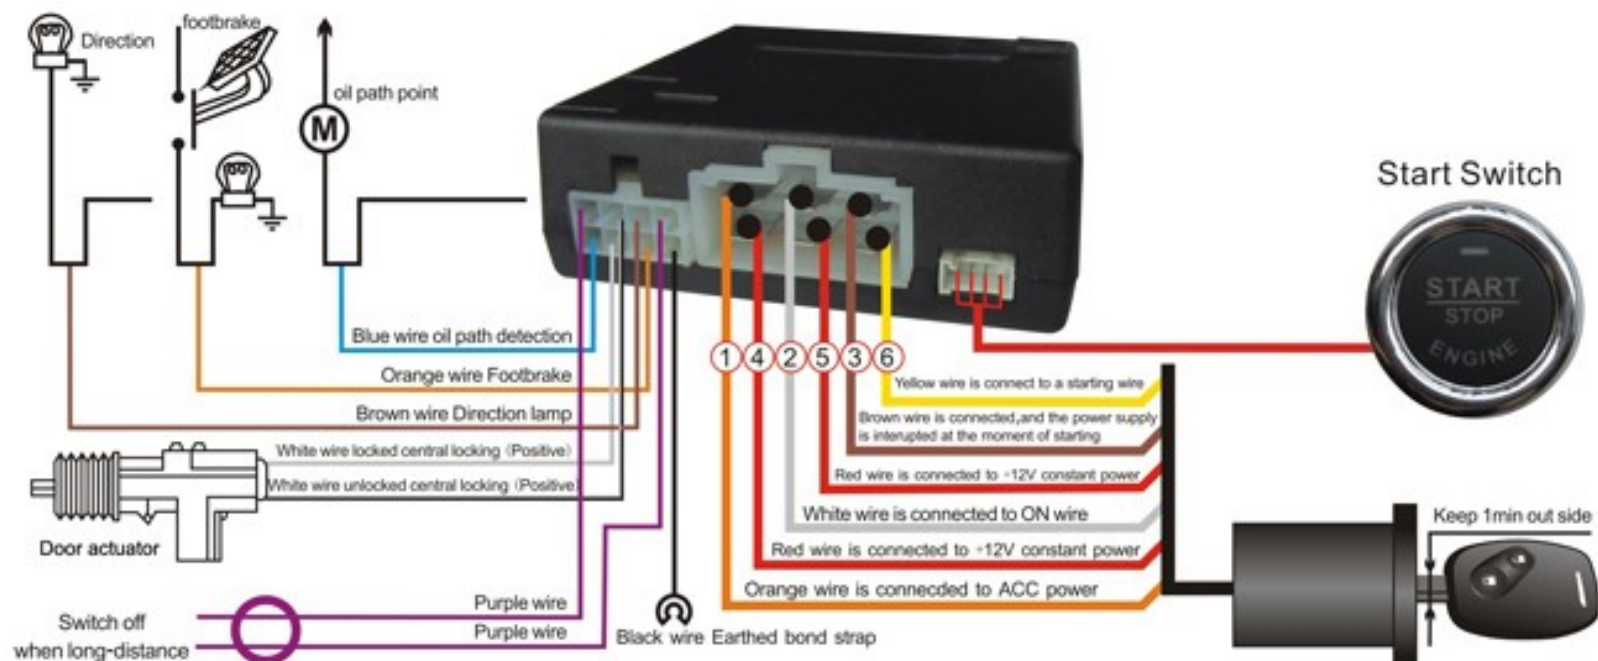

## Operating Steps:

1. Remote unlock, start button blue lights up.
2. Step on footbrake, short press the start button to start the car. If it can not work, long-press the start button until start, when red lights up is succeeded.
3. Switch off the system: Step on the footbrake and short-press the start button; Not step on footbrake and long-press the start button.
4. Do not step on the footbrake, short-press the button one by one means ACC-ON-OFF-ACC.

## Installation for chip:

### Chart1

The way for release the wheeling lock: insert the blade into the lockhole, then turn it to the "ON" place

## THE MANUAL FOR RELEASE THE STEERING LOCK:

1. Make sure the car with steering lock function or not. (if yes, follow the next step)
2. Please match one sample key with the original key by yourself (or other people). So that the sample key can be start the car.
3. When finish matched, put the sample key into the lock of car, like this picture, and turn the key to the "On" place. So that the steering can be turn round. Then cut and keep 1mm length of this sample key which outside of the lock. Look at the picture.




Cut the lock  
Outside the lock




Inside the lock  
Keep 1mm outside

4. Stick the Ignition Switch on the lock. (That is the reason for cut the key.)

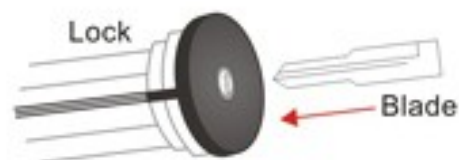

Match the blade with the original key, then insert the blade into the lockhole like the chart. So that the wheeling can't be lock. Then stick the push button on the face of lock.


#### Chart2

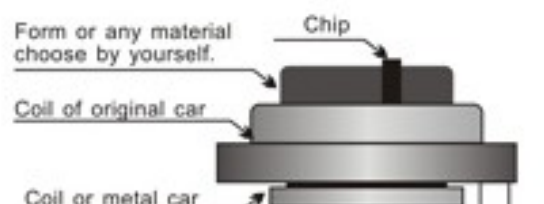

#### Reminder for install the chip:

The signal of chip is weak for some kinds of the car. It is difficult to start the car when fix it in the coil. The way to solve this Problem is enhance the induction signal of the chip (like the chart).

#### Chart3

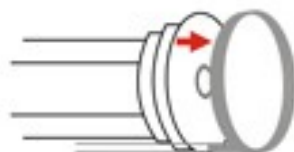

Take the original induction coil out from the lock.

#### Chart4



Put the original remote into the coil, make sure the induction of the chip and coil is good.



5. **Attention:** there is the chip in the original key or remote control, it ask for take out and hid inside in or near the steering position. But if you can't find the chip by yourself. Just hid the original key or remote control in or near the steering position. (Don't worry that it will not safety. Since without our remoter of PKE-02, the theft can't be open and start the car.)


6. Everything finish like the picture:



If you don't like to cut the key for release the steering lock, you should make a hole in the car which near the steering and install the Ignition Switch.



Like the picture. but it will more inconvenience for you. And you need to use the original key to release the steering lock every time you use the car.

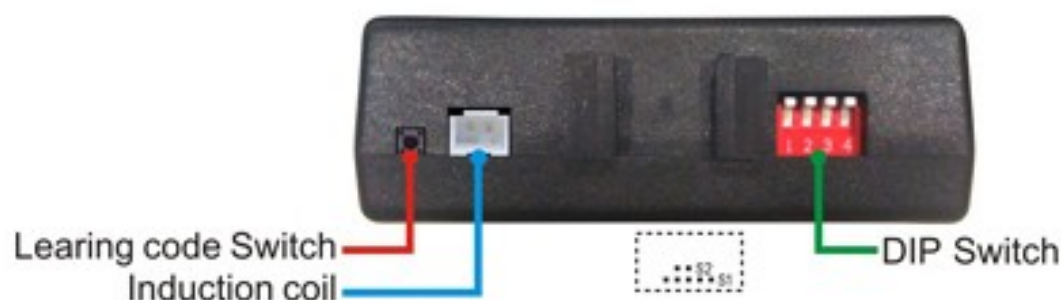

### Setting inside the main unit

Switch	Press up	Press down
SW1	the time for start the engine is 0.85 second	the time for start the engine is 1 second
SW2	Can't be start the engine after 90 seconds when start the engine all the time after disarm	Can't be start the engine after 3 mins when start the engine all the time after disarm ( blue light will flashing when the time is up)
SW3	Gasoline car	Diesel car
SW4	Manual gear shift car	Auto gear shift car
S1	RFID mode	No RFID mode
S2	Brake normal	Have brake signal after turn on ON

**NOTE:** 1. After limit SW2, if you want to start the car, must lock and re-unlock again.  
RFID card mode: it can swipe the car within 15 mins.  
2. The car with manual transmissions, need to adjust the system into manual gear shift mode. To avoiding start the car in the gear.