


# Elegant

Year	Model	Style		Year	Model	Style		Year	Model	Style	
		Front	Rear			Front	Rear			Front	Rear
	ALFA ROMEO	1	2		<u>HONDA</u>				<u>MITSUBISHI</u>		
	AUDI	1	2		ACCORD	-	2	93-94	ECLIPSE	2	2
	BMW	1	2		CIVIC	-	2	95	ECLIPSE	-	2
	BUICK	1	2		LOGO	1	2		EXPO LRV		
	CADILLAC	1	2		ODYSSEY	-	2		GALANT	2	2
	CHEVROLET	2	2	97	CRX	1	2		MIRAGE	-	2
	CHRYSLER	1	2		PRELUDE	-	2		CARISMA	1	2
	CITROEN	1	2		CR-V	1	-		COLT	1	2
	DACIA	1	2		LEGEND	1	2		LANCER	1	2
	DAIHATSU	1	2						SIGMA	-	2
	DODGE	1	2		<u>HYUNDAI</u>						
	JEEP/EAGLE	1	1		ACCENT	1	2		<u>NISSAN</u>		
	LINCOLN	2	2		PONY	1	2		ALTIMA	1	2
	PONTIAC	2	2	89-91	SONATA	-	2		ACCES	1	2
	SUBARU	-	1	95-97	SONATA	2	2		MAXIMA	1	2
					EXCEL	-	2		SANTRA	-	2
	<u>DAEWOO</u>				LANTRA	-	2		SUNNY	1	2
	TICO	1	1						PRIMERA	1	2
	MATIZ	1	1		<u>ISUZU</u>	2	2				
	NAXIA	1	2		KIA	1	2		LANCIA	1	2
	ESPERO	2	2		LANCIA	1	2		LEXUS	1	2
	LANOS	1	2						OLCIT	1	2
	NUBIRA	1	2		<u>MAZDA</u>				OPEL	1	2
	DODE	1	2		323	1	2		OCTAVIA	-	2
					92-94	626	2	2	PEUGEOT	1	2
	<u>FIAT</u>				94-97	626	-	2	RENAULT	1	2
	BRAVO	1	2		94-95	929	-	2	ROVER	1	2
	BRAVA	1	2			DEMIO	2	2	SAAB	1	2
	MAREA	1	2		90-95	PROTEGE	-	2	SEAT	1	2
	PALIO	1	2		96-97	PROTEGE	2	2	SKODA	-	2
	SIENA	1	2		90-95	MIATA	2	2	SUZUKI	1	2
	PUNTO	1	2		96-98	MIATA	-	2			
	TEMPRA	2	2		96-97	MILLENNIA	2	2	<u>TOYOTA</u>		
	TIPO	1	2		94-95	MPV-VAN	2	2	AVALON	2	2
	UNO	1	2			MX 3	-	2	AVENICISS	1	2
						MX 6	-	2	CAMRY	-	2
	<u>FORD</u>				<u>MERCEDES</u>				CELICA	2	2
	AEROSTAR	1	1		123	1	2		COROLLA	1	2
	ESCORT	1	2		124	1	2		MR-2	2	2
	FOCUS	1	2		190 D/E	1	2		PASEO	2	2
	SIERRA	1	2		126-SE	1	2		PREVIA	2	2
	MONDEO	1	2		C-180	1	2		TERCEL	2	2
	MUSTANG	2	2		C-200+280	1	2		STARLET	2	2
	SCORPIO	1	2		S-140	1	2		YARIS	1	1
	TAURUS	2	2		VITO	1	2				
89-93	PROBE	1	2						VOLKSWAGEN	2	2
95-97	PROBE	-	2						VOLVO	1	2
93-97	VAN	2	2								
94-96	WINDSTAR	2	2								
97	WINDSTAR	-	2								

## Instructions

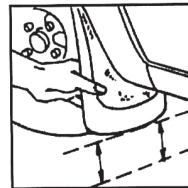

- Check fender edge for existing screws

- Position mudflap parallel to road

- Install mudflap with screw provided

